



ICD-UX560

4-573-934-12(1)



(1)

Refer to the Help Guide

This is the Operating Instructions, which provides you with instructions on the basic operations of the IC recorder.
The Help Guide is an online manual.

Refer to the Help Guide when you would like to know further details, operations and possible solutions when a problem occurs.


http://rd1.sony.net/help/icd/u56/h_ce/
**Check the supplied items**

- IC Recorder (1)
- Carrying pouch (1)
- Operating Instructions (this sheet)
- Warranty card
- Application Software, Sound Organizer 2 (Installer file stored in the built-in memory so that you can install it to your computer.)

Optional accessories


- Electret condenser microphone ECM-CS3, ECM-TL3
- USB AC adaptor AC-UD20

Note
Depending on the country or region, some of the models or optional accessories are not available.

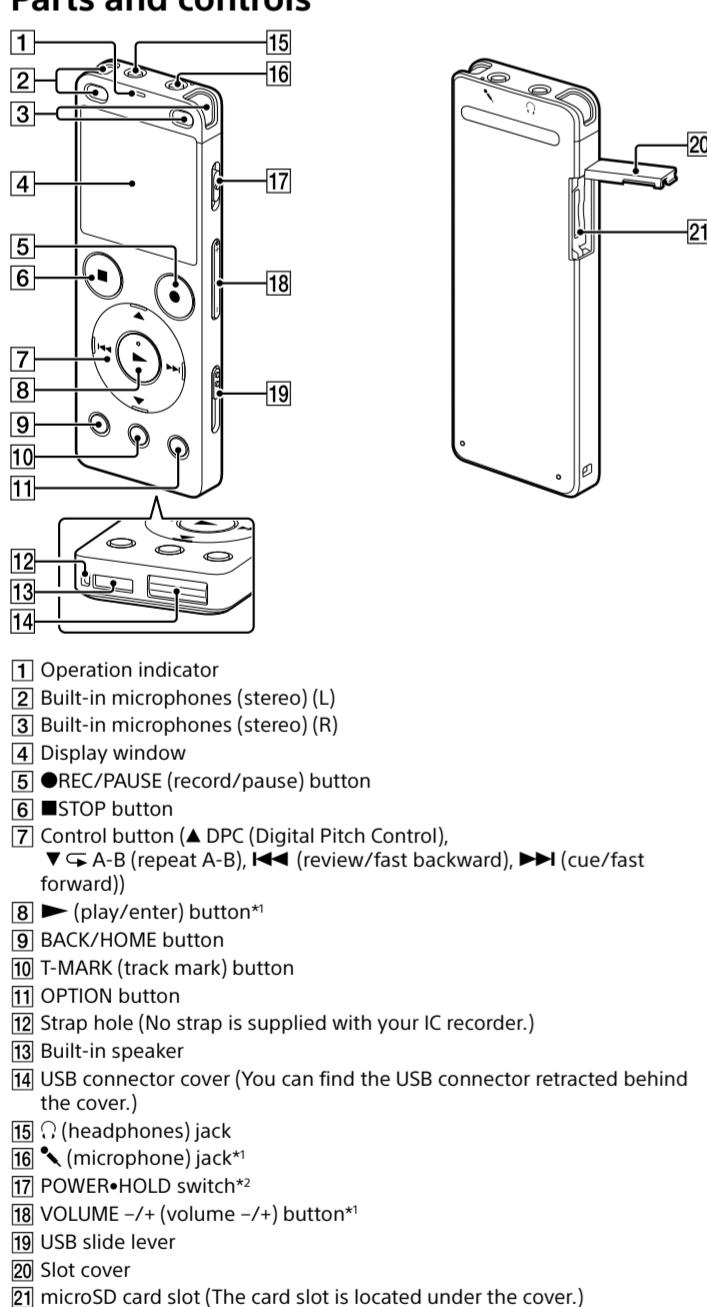Parts and controls

* The ▶ (play/enter) button, VOLUME -/+ (volume -/+), and (microphone) jack have a tactile dot. Use the tactile dot as a reference when operating the IC recorder.

* Sliding the POWER+HOLD switch to "POWER" and holding it for 8 seconds or longer restarts your IC recorder. For detailed instructions, refer to the Help Guide.

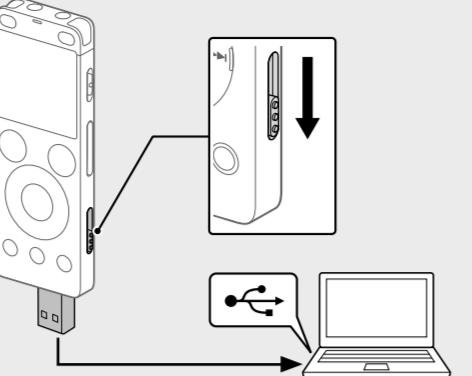
Let's try out your new IC recorder**Charge**

① Charge the IC recorder.

Slide the USB slide lever in the direction of the arrow, and insert the USB connector into the USB port of a running computer. When the battery is fully charged, the battery indicator will indicate "充满".

② Disconnect the IC recorder.

Make sure that the operation indicator does not light. Then refer to the Help Guide to remove the IC recorder safely.

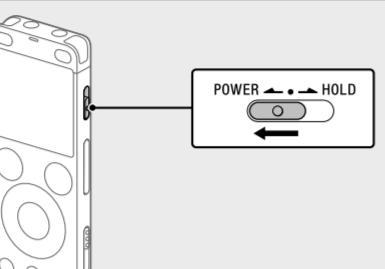
Power on

Slide and hold the POWER+HOLD switch in the direction of "POWER" until the window display appears. To turn the power off, slide the POWER+HOLD switch to "POWER" and hold it until "Power Off" appears on the display window.

To prevent unintentional operations (HOLD)


Slide the POWER+HOLD switch in the direction of "HOLD".

④ To release the IC recorder from the HOLD status, slide the POWER+HOLD switch towards the center.

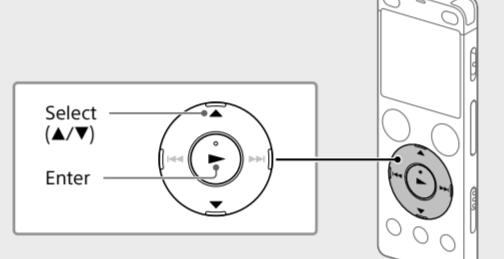Initial settings

When you turn on your IC recorder for the first time, the "Configure Initial Settings" screen appears on the display window. You can then select the display language, set the clock, and turn on/off the beep sound.


① Select "Yes" to start the initial settings.

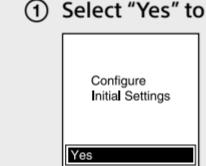

② Select the display language.


You can select from the following languages:
Deutsch (German), English*, Español (Spanish), Français (French), Italiano (Italian), Русский (Russian), Türkçe (Turkish)
* Default setting

③ Set the current year, month, day, hour, and minute.

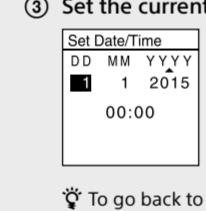

④ Go to back to the previous clock setting item, press BACK/HOME.

⑤ Select "Next".

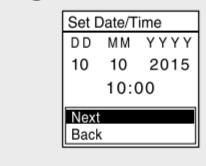

⑥ Select "ON" or "OFF" to turn on or off the beep sound.

When the initial settings finish, the completion message and then the HOME menu screen appears.

⑦ Notes


- If you take 30 seconds or longer before proceeding to the next step, the display window will turn off. To turn on the display window for continuing the initial settings, press BACK/HOME.
- You can change any of the initial settings at any time later. For detailed instructions, refer to the Help Guide.

* The ▶ (play/enter) button, VOLUME -/+ (volume -/+) button, and (microphone) jack have a tactile dot. Use the tactile dot as a reference when operating the IC recorder.


* Sliding the POWER+HOLD switch to "POWER" and holding it for 8 seconds or longer restarts your IC recorder. For detailed instructions, refer to the Help Guide.

The display window turns off automatically

The "Screen Off Timer" setting on your IC recorder is set to "30sec" by default to save battery power. If you leave the IC recorder untouched for 30 seconds, the display window will turn off, but you can still perform any button operations. To turn the display window back on, press BACK/HOME.

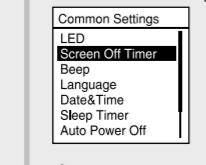

You can keep the display window from turning off or change the default setting to another timer interval. Press and hold BACK/HOME and select "Settings" - "Common Settings" - "Screen Off Timer," and then select "No Auto Screen Off," "15sec," "30sec," "1min," "3min," or "5min."

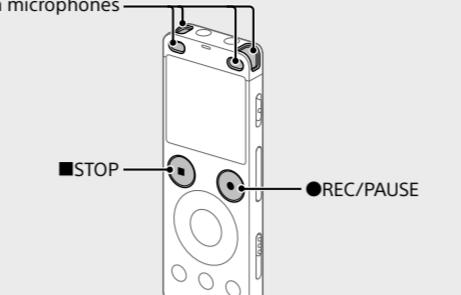Record

 
① Before you start using the IC recorder, make sure that the POWER+HOLD switch is at the center dot position.

• You can select a recording scene for each situation by selecting "Scene Select" in the OPTION menu.

② Turn the IC recorder so that its built-in microphones point in the direction of the recording source.

③ Press REC/PAUSE.

Recording starts and the operation indicator lights in red.




During the recording, the peak meters appear to help you adjust the recording level ([A]).

Please adjust the orientation of the built-in microphones, the distance from the sound source, or the sensitivity setting of the microphones so that the recording level stays around -12 dB, which fits within the optimum range, as illustrated above.

④ Press STOP to stop recording.

"Please Wait" appears first, and then the record standby screen appears.

After you stopped recording, you can press ▶ to play the file you have just recorded.

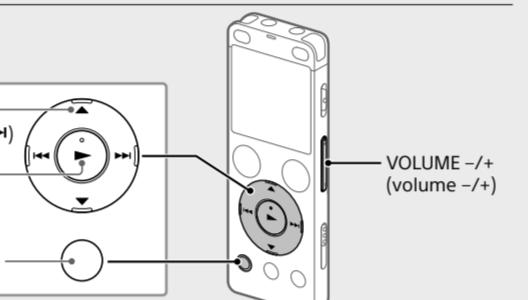Listen

① Select "Recorded Files" from the HOME menu.

② Select "Latest Recording," "Search by REC Date," "Search by REC Scene," or "Folders."

③ Select your desired file.

Playback starts and the operation indicator lights in green.




④ Press VOLUME -/+ to adjust the volume.

⑤ Press STOP to stop playback.

To add a track mark

You can add a track mark at a point at which you want to divide a file later or locate during playback. You can add a maximum of 98 track marks to each file.

You can also add track marks during recording.

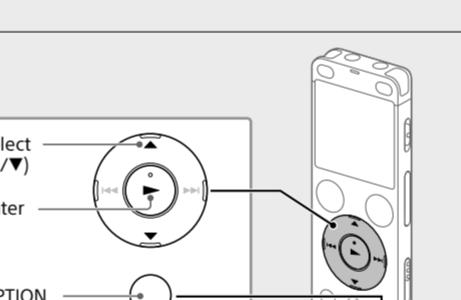Delete

① Note

Once a file is deleted, you cannot restore it.


② Select the file you want to delete from the list of recorded files or play back the file you want to delete.

③ Select "Delete A File" from the OPTION menu.



"Delete?" appears and the selected file starts playing for your confirmation.


④ Select "Yes."

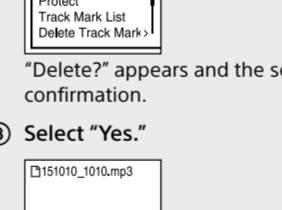

"Please Wait" appears and stays until the selected file is deleted.

Using the HOME menu

You can use the HOME menu for a variety of operations, including locating and playing a recorded file and changing the settings of your IC recorder.

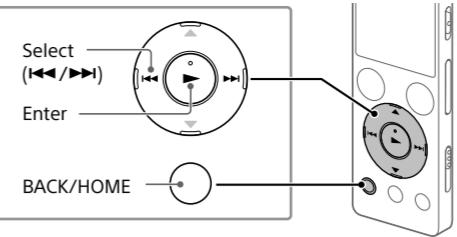

① Press and hold BACK/HOME.

The HOME menu screen appears.



* The function you are currently using is displayed in "XX."

② Select your desired function from the following:

| | |
|----------------|------------------------------------------------------------------------------------------------------------------|
| Music | You can select and play one of the files you have imported from a computer. |
| Recorded Files | To locate a music file, select "All Songs," "Albums," "Artists," or "Folders." |
| Record | You can select and play one of the files you have recorded with your IC recorder. |
| Settings | To locate a recorded file, select "Latest Recording," "Search by REC Date," "Search by REC Scene," or "Folders." |
| Return to XX* | You can display the record standby screen, and then start recording. |


* The function you are currently using is displayed in "XX."

③ Press STOP to return to the screen displayed before you entered the HOME menu.


Using the OPTION menu

You can use the OPTION menu to perform a variety of functions, including changing the settings of your IC recorder.

The available items differ depending on the situation.

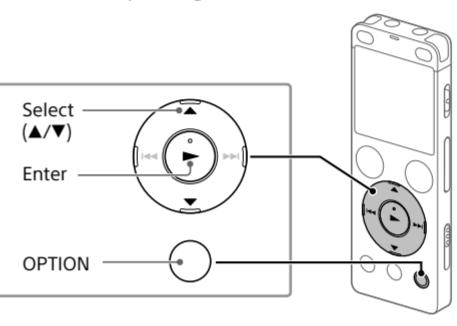

① Select your desired function from the HOME menu, and then press OPTION.

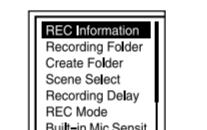

② Select the menu item for which you want to change the setting.

③ Select your desired setting option.

④ Press STOP to return to the screen displayed before you entered the HOME menu.

⑤ Select your desired function from the HOME menu, and then press OPTION.



⑥ Press STOP to return to the screen displayed before you entered the HOME menu.

Copying files from your IC recorder to a computer

You can copy the files and folders from your IC recorder to a computer to store them.

① Follow the instructions in "Charge" to connect your IC recorder to a computer.

② Drag and drop the files or folders you want to copy from "IC RECORDER" or "MEMORY CARD" to the local disk on the computer.

③ Disconnect your IC recorder from the computer.

Installing Sound Organizer 2

Install Sound Organizer on your computer.

Sound Organizer allows you to exchange files between your IC recorder and your computer.

Songs imported from music CDs and other media, MP3 and other audio files imported to a computer can also be played and transferred to the IC recorder.

① Notes

• Sound Organizer is compatible with Windows computers only. It is not compatible with Mac.

• This IC recorder is compatible with Sound Organizer 2 only.

• If you format the built-in memory, all data stored there will be deleted. (The Sound Organizer software will also be deleted.)

• When installing Sound Organizer, log in to an account with administrator privileges.

② Follow the instructions in "Charge" to connect your IC recorder to a computer.

③ Make sure the IC recorder is successfully detected by the computer.

"Connecting" appears and stays on the IC recorder's display window while the IC recorder is connected to the computer.

④ Go to the [Start] menu, click [Computer], and then double-click [IC RECORDER] - [FOR Windows].

⑤ Double-click [SoundOrganizer_V2001] (or [SoundOrganizer_V2001.exe]).

Follow the computer's on-screen instructions.

⑥ Make sure that you accept the terms of the license agreement, select [I accept the terms in the license agreement], and then click [Next].

⑦ When the [Setup Type] window appears, select [Standard] or [Custom], and then click [Next].

Follow the instructions on the screen and set the installation settings when you select [Custom].

⑧ When the [Ready to Install the Program] window appears, click [Install].

The installation starts.

⑨ When the [Sound Organizer has been installed successfully.] window appears, check [Launch Sound Organizer Now], and then click [Finish].

⑩ Note

You may need to restart your computer after installing Sound Organizer.

Grabadora IC

Manual de instrucciones



ICD-UX560

Consulte la Guía de ayuda

Este es el Manual de instrucciones en el cual se ofrecen instrucciones sobre las operaciones básicas de la grabadora IC. La Guía de ayuda es un manual en línea.

Consulte la Guía de ayuda cuando quiera conocer más detalles, las operaciones y las posibles soluciones cuando ocurra algún problema.

http://rd1.sony.net/help/icd/u56/h_ce/



Compruebe los componentes suministrados

- Grabadora IC (1)
- Funda de transporte (1)
- Manual de instrucciones (esta hoja)
- Tarjeta de garantía
- Software de la aplicación, Sound Organizer 2 (Archivo del instalador almacenado en la memoria interna para poder instalarlo en su equipo.)


Accesorios opcionales

- Micrófono condensador de electret ECM-CS3, ECM-TL3
- Adaptador de ca USB AC-UD20

■ Nota

Dependiendo del país o la región, algunos de los modelos o accesorios opcionales pueden no estar disponibles.

Partes y controles

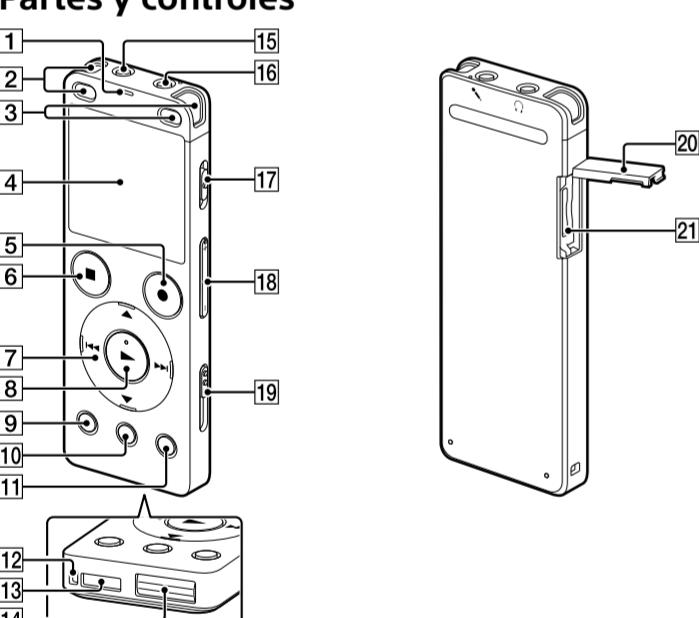


- 1 Indicador de funcionamiento
- 2 Micrófonos incorporados (estéreo) (izquierdo)
- 3 Micrófonos incorporados (estéreo) (derecho)
- 4 Visor
- 5 Botón REC/PAUSE (grabación/pausa)
- 6 Botón STOP
- 7 Botón de control (▲ DPC (Digital Pitch Control), ▶ A-B (repetición A-B), ▲◀ (revisión/retroceso rápido), ▶▶ (búsqueda/avance rápido))
- 8 Botón ▶ (reproducción/entrar)*1
- 9 Botón BACK/HOME
- 10 Botón T-MARK (marca de pista)
- 11 Botón OPTION
- 12 Orificio para correa (No se suministra correa con la grabadora IC.)
- 13 Altavoz incorporado
- 14 Cubierta del conector USB (Puede encontrar el conector USB retraido detrás de la cubierta.)
- 15 Toma (auriculares)
- 16 Toma (micrófono)*1
- 17 Interruptor POWER•HOLD*2
- 18 Botón VOLUME -/+ (volumen -/+)*1
- 19 Lengüeta deslizante USB
- 20 Cubierta de ranura
- 21 Ranura para tarjetas microSD (La ranura para tarjetas se encuentra bajo la cubierta.)

*1 El botón ▶ (reproducción/entrar), el botón VOLUME -/+ (volumen -/+), y la toma (micrófono) poseen un punto táctil. Utilice el punto táctil como referencia cuando opere la grabadora IC.
*2 Si desliza el interruptor POWER•HOLD hasta "POWER" y lo mantiene allí durante 8 o más segundos, se reiniciará la grabadora IC. Para las instrucciones detalladas, consulte la Guía de ayuda.

Vamos a probar la nueva grabadora IC

Carga

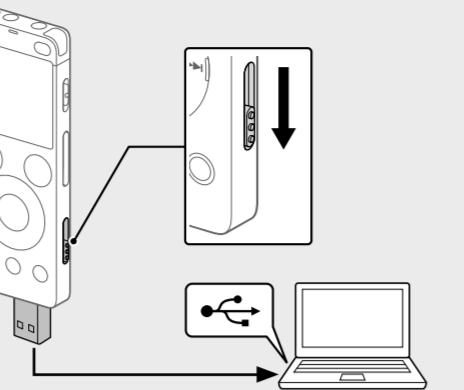


① Cargue la grabadora IC.

Deslice la lengüeta de USB en el sentido de la flecha, e inserte el conector USB en el puerto USB de un equipo que esté encendido. Cuando la batería esté completamente cargada, el indicador de la batería mostrará "Full".

② Desconecte la grabadora IC.

Asegúrese de que el indicador de funcionamiento no se ilumine. A continuación, consulte la Guía de ayuda para quitar la grabadora IC de forma segura.

Encendido

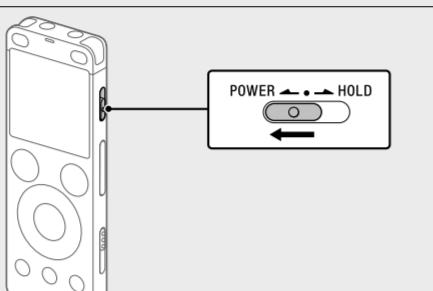

Deslice y no suelte el interruptor POWER•HOLD en el sentido de "POWER" hasta que se muestre el visor.

Para apagar, deslice el interruptor POWER•HOLD hasta "POWER" y manténgalo hasta que en el visor aparezca "Power Off".


Para evitar el funcionamiento no intencional (HOLD)

Deslice el interruptor POWER•HOLD en el sentido de "HOLD".

POWER • HOLD


Para desactivar el estado HOLD de la grabadora IC, deslice el interruptor POWER•HOLD hacia el centro.

Ajustes iniciales

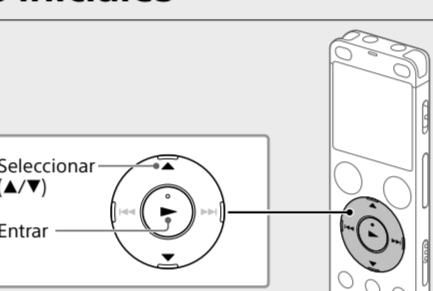

Cuando encienda la grabadora IC por primera vez, en el visor aparecerá "Configure Initial Settings". A continuación puede seleccionar el idioma del visor, ajustar el reloj, y activar/desactivar el pitido.

① Seleccione "Yes" para iniciar los ajustes iniciales.

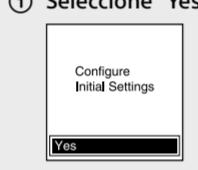


② Seleccione el idioma del visor.

Puede seleccionar los idiomas siguientes: Deutsch (alemán), English (inglés), Español, Français (francés), Italiano (italiano), Русский (ruso), Türkçe (turco)

* Ajuste predeterminado

③ Ajuste el año, mes, día, hora, y minutos actuales.

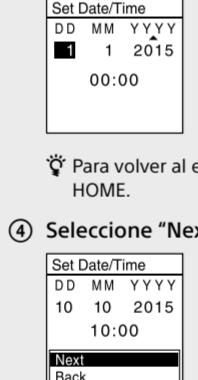


④ Pulse VOLUME -/+ para ajustar el volumen.

⑤ Pulse ■STOP para detener la reproducción.

Para añadir una marca de pista

Puede añadir una marca de pista en un punto en el que deseé dividir un archivo más tarde o localizar durante la reproducción. Puede añadir un máximo de 98 marcas de pista a cada archivo. También puede añadir marcas de pista durante la grabación.

Borrado

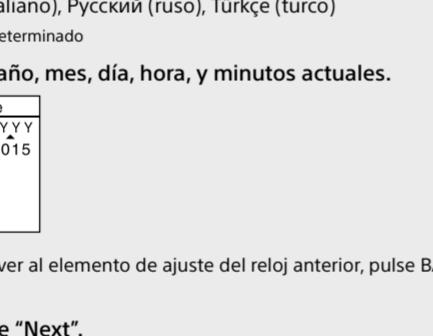

⑥ Seleccione "ON" u "OFF" para activar o desactivar el pitido.

Cuando finalicen los ajustes iniciales, aparecerá el mensaje de terminación y después la pantalla del menú HOME.

⑦ Seleccione "Next".

 


⑧ Seleccione "ON" o "OFF" para activar o desactivar el pitido.


Cuando finalicen los ajustes iniciales, aparecerá el mensaje de terminación y después la pantalla del menú HOME.

* Puede cambiar cualquiera de los ajustes iniciales en cualquier momento posterior. Con respecto a las instrucciones detalladas, consulte la Guía de ayuda.


⑨ Seleccione "Beep".




⑩ Seleccione "OFF".

 


⑪ Seleccione "Delete".

 


⑫ Seleccione "Yes".

 


⑬ Seleccione "Delete".

 

⑭ Seleccione "Delete?".

 


⑮ Seleccione "Delete".

 

⑯ Seleccione "Delete".



 ⑰ Seleccione "Delete".




⑱ Seleccione "Delete".




⑲ Seleccione "Delete".



 
⑳ Seleccione "Delete".




⑳ Seleccione "Delete".

 

⑳ Seleccione "Delete".

 

⑳ Seleccione "Delete".

 

⑳ Seleccione "Delete".



⑳ Seleccione "Delete".

⑳ Seleccione "Delete